



ENGLISH



CONNECT AND USE

- Charge your JOY PRO for a least 10 minutes before use.
- Open the charge case and keep the earbuds in place to enter pairing mode.
- Select "Happy Plugs Joy Pro" on your phone/device to pair. Your earbuds are now ready to use.



RESET TO FACTORY SETTINGS

- Delete "Happy Plugs Joy Pro" from your Bluetooth devices list.
- Make sure the charge case is charged. Put the earbuds in the charge case.
- With the charge case open, press and hold the button on the charge case for 6 seconds until LED flash red 4 times.

The earbuds are now reset and ready to pair to your device. Just follow the "Connect and use" steps.

NOISE CANCELLATION / TRANSPARENCY

Your headphones have three modes to cycle through.

Transparency Mode

Let ambience sounds in. Great for awareness.

ANC Mode (Active Noise Cancellation)

Reduce unwanted and disturbing sounds. Great for busy environments.

Basic Mode

Turn off ANC microphones and rely on silicone eartips for noise cancellation. Great for workouts.



TOUCH CONTROLS

R	x 1	Play / Pause
	x 2	Next Track
	x 3	Previous Track
L	x 1	Call Answer / Call End
	x 2	Reject Call
	2 s	Accept Call and End First Call
	2 s	Transparency / ANC / Basic
L	x 1	Volume Up
	x 2	Volume Down
	x 3	Gaming Mode On/Off
	2 s	Siri / Google Assistant

CHARGE CASE BUTTON

x 1	Battery Status
6 s	Reset Earphones

BATTERY LIGHT

0 - 10 %	Flashing Red
10 - 30 %	Red
30 - 60 %	Light Green
60 - 100 %	Green

Full instructions & FAQ available at:
help.happyplugs.com