

Protecting Our Environment

This product should not be disposed of with your household waste. At the end of its working life please take to your local Recycling Centre. If you are unsure, check with your Local Authority or original retailer for recycling advice.



Declaration of Conformity

VELD hereby declares this product is in compliance with all essential requirements and relevant directives. Full documentation is available on request.

EU: EN 55032, EN 55035, EN 61000-3-3, EN 61000-3-2, EN IEC 62368-1:2020+A11:2020

BATTERY DIRECTIVES: IEC 62133, UN38.3, 2006/66/EC




2 Year Guarantee

This product is guaranteed for two years from the date of purchase. This does not affect your statutory rights. Proof of purchase required, terms and conditions apply. For full information visit veldpower.com.



AVF Group Ltd, Hortonwood 30, Telford, TF1 7YE veldpower.com

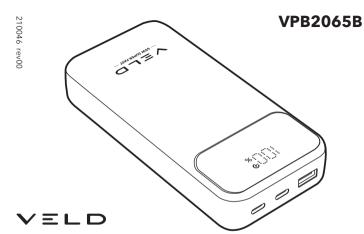

Power Bank

— 20,000 mAh —





Safety Precautions - PLEASE READ FULLY BEFORE FIRST USE

- Never store or use this Power Bank in temperatures below 0°C (32°F) or above 45°C (115°F).
- Do not overcharge your device. The Power Bank may become hot under excessive use.
- Remove your device once it is fully charged. Never charge your device for more than 7 hours at a time.
- The Power Bank will only achieve full performance after 2 or 3 completed charge and discharge cycles.
- To reduce the risk of injury, close supervision is required when the Power Bank is used near children.
- Do not expose the Power Bank to moisture.
 Do not use the Power Bank if damaged or modified.
- Do not expose the Fower Bank to moisture.
- $\bullet \ \mathsf{Damaged} \ \mathsf{or} \ \mathsf{modified} \ \mathsf{batteries} \ \mathsf{may} \ \mathsf{exhibit} \ \mathsf{unpredictable} \ \mathsf{behaviour}, \mathsf{resulting} \ \mathsf{in} \ \mathsf{risk} \ \mathsf{of} \ \mathsf{fire}, \mathsf{explosion} \ \mathsf{or} \ \mathsf{injury}.$
- Do not use in excess of output rating. Overloading outputs above the max rating may result in risk of fire or injury.
- Do not disassemble. For repair, seek a qualified professional. Incorrect reassembly may result in risk of fire or injury.
- Do not expose this device to fire or excessive heat. Fire or temperatures above 40°C (104°F) may result in explosion.
- Ensure that this product is serviced only by qualified professionals, using identical replacement parts.

Technical Specifications

Battery Capacity: 20000mAh / 3.7V / 74Wh

USB-C 1/2 Input: 5V/3A, 9V/3A, 12V/3A, 15V/3A, 20V/3.25A **65W Max**

USB-C 1/2 Output: 5V/3A, 9V/3A, 10V/2.25A, 12V/3A, 15V/3A, 20V/3.25A **65W Max**

USB-A Output: 5V/3A, 9V/2A, 10V/2.25A, 12V/1.5A **22.5W Max**

USB-C 1 + USB-C 2: 35W + 22.5W USB-C 1 + USB-A: 35W + 22.5W

USB-C 2 + USB-A: 15W

Instructions

Charging the Power Bank:

Charge the Power Bank fully before usage.

Connect one end of the included USB-C to USB-C Cable to an appropriate power source, and the other to a USB-C 1 2 input port on the Power Bank.

Once connected, the Display 4 will flash while charging, and will stop flashing once fully charged.

Charging devices with the Power Bank:

Connect an appropriate cable to your device, then connect the other end of the cable to a USB-C 1 2 or USB-A 3 output port on the Power Bank.

The Display 4 will light up when charging commences.

Once fully charged, unplug the cable from your device and the Power Bank.

To check remaining power:

Press Display On / Off Button 5 once to show the remaining battery percentage on the Display 4

